


Generation 1 Two-way Switching (With 2 Intermediate Points)

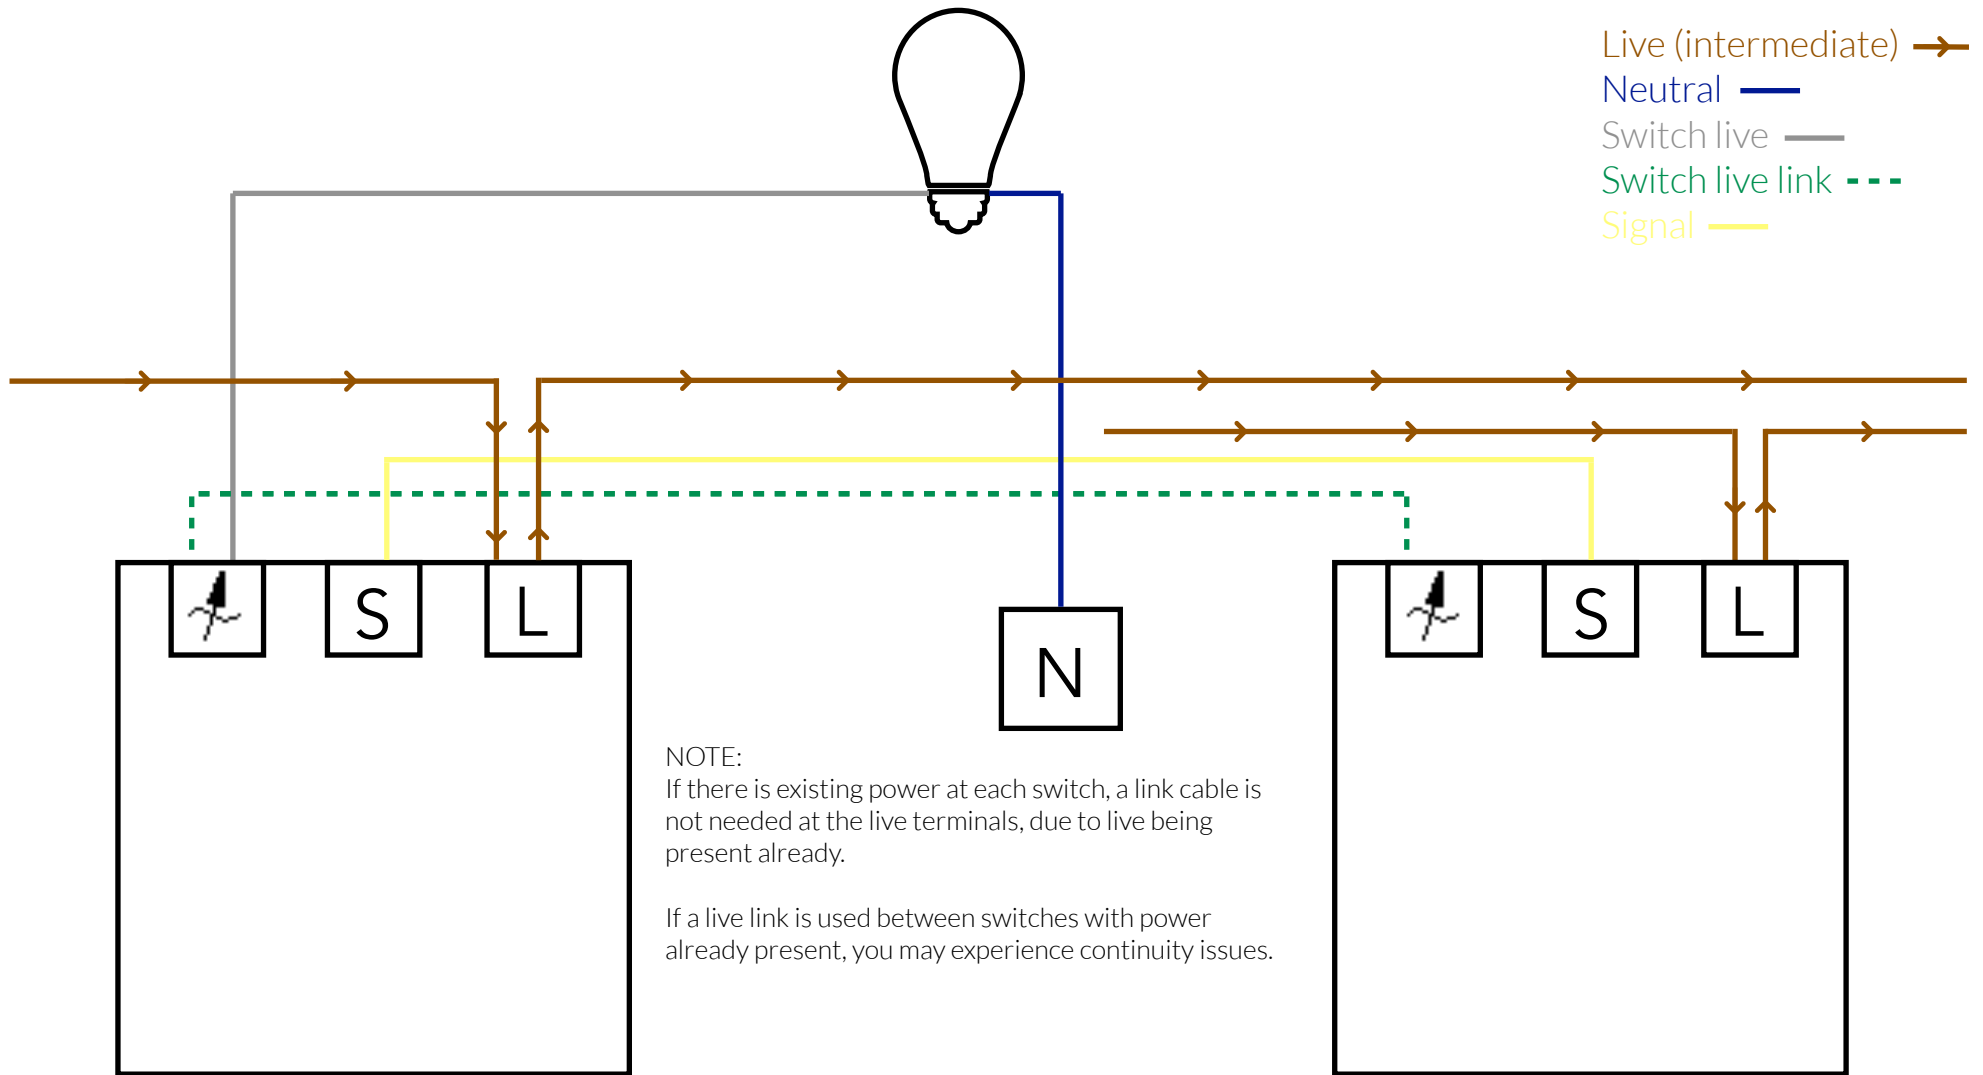

IMPORTANT:

A switch live link cable is needed in order for each device to sense a load. If no load and live feed is present then the device will not operate. The cable colouring in this wiring diagram may not match the cable colours at your switch.